



Assembly Instruction

- Before you start mounting the valve please make sure that the gas pressure of the accumulator has been released
- 2. Mount the 0-rings 4 and 6 on the valve core 5
- 3. Place flat seal 3 on the valve core 5
- 4. Insert the valve pin 2 into the valve core 5
- 5. Place the spring 1 on the top of the Valve pin 2
- 6. To position the spring 1 correctly align the accumulator horizontally or the SBAA vertically
- 7. Screw the complete assembly into the SBAA or the accumulator
- Screw the protection cap on the SBAA or accumulator after the charging has been done



